



Air FTP

Air handling units design software

Setup Guide

Contents

General installation information	3
Providing Feedback	3
System Requirements	3
New Installation	4
Welcome	4
User Data	5
Installation Directory	6
Microsoft [™] Data access Environment Installation	6
License Agreement	7
Microsoft [™] Data access Environment Installation	8
PDF printer installation	9
RTF printer installation	9
Activating Air FTP	11
Air FTP Configuration	12
Updating Existing installation	14
Welcome	14
License Agreement	15
Microsoft [™] Data access Environment Installation	16
Welcome	17
PDF printer installation	18
RTF printer installation	18
Archive updating	19

General installation information

Welcome to Air FTP installation manual.

Air FTP is selection software designed to carry out the dimensioning of Air Handling Units in a simple and complete way.

Installation type	Usage
<u>New installation</u>	Install Air FTP on your computer
<u>Updating Existing installation</u>	To modify, repair or remove an existing Air FTP installation. You can update an existing air FTP installation and continue to use the existing offers.



If you install air FTP in Windows as a user with restricted access rights (any user without administrator rights), the software will not install correctly.

Providing Feedback

We are constantly working to improve this software. Please send your suggestions, complaints, criticisms, or praise.

A confirmation that we have received your email will be sent to you. We care about your feedback and we will use it to further improve the Software.

System Requirements


- CD-Rom Drive, (if installing from CD)
- Approximately 75 MB of available hard-disk space.



New Installation

Welcome


The first window to appear after you start the setup application is the welcome dialog.

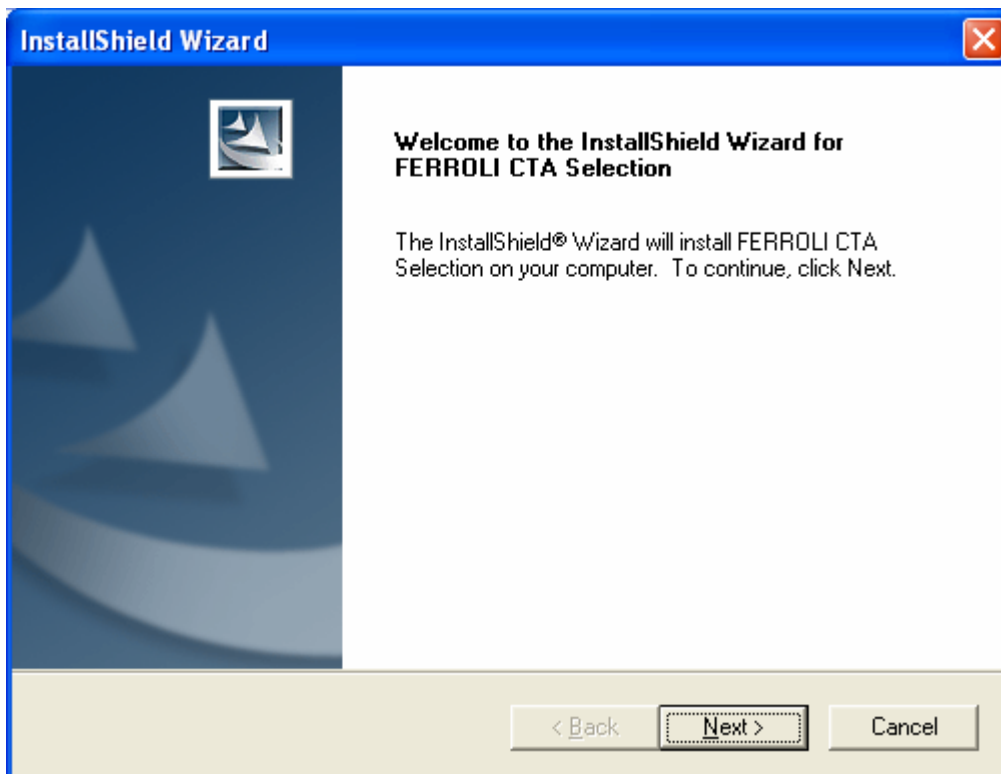

- Click **Next**.

User Data

The data entered here is used to personalize the installation

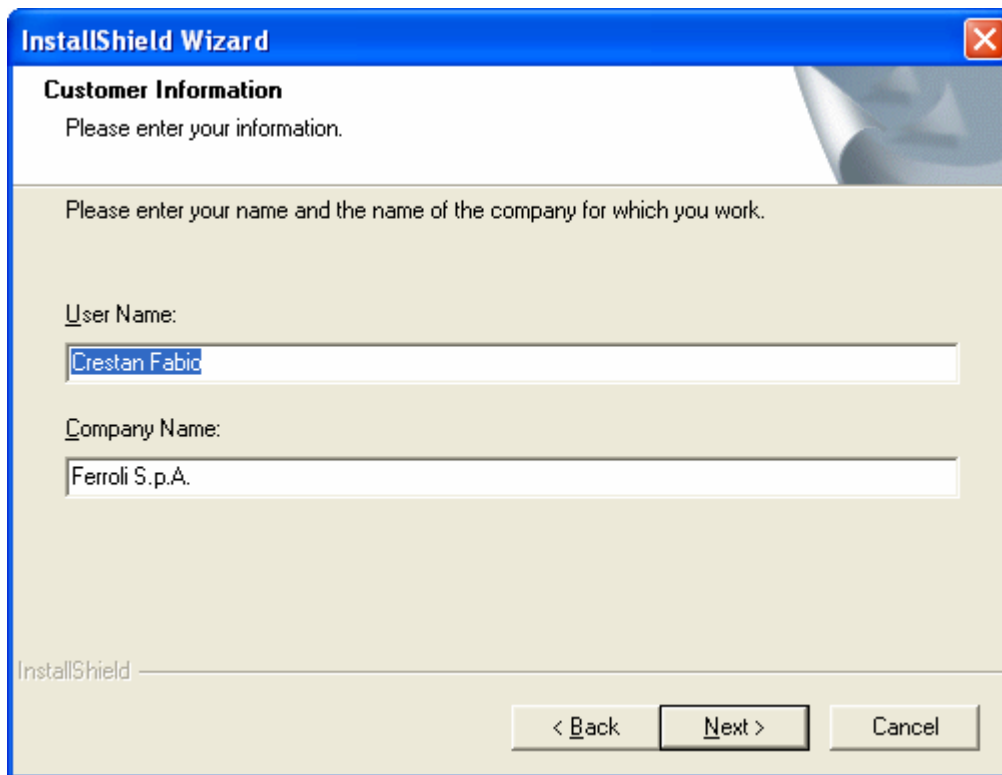

InstallShield Wizard

Customer Information
Please enter your information.

Please enter your name and the name of the company for which you work.

User Name:
Crestan Fabio

Company Name:
Ferrolì S.p.A.

InstallShield


< Back Next > Cancel

- Enter your personal data.
- Click **Next** to continue with the installation.

Air FTP installation guide

Installation Directory


The next dialog lets you select the installation directory. This dialog does not appear in an update installation.

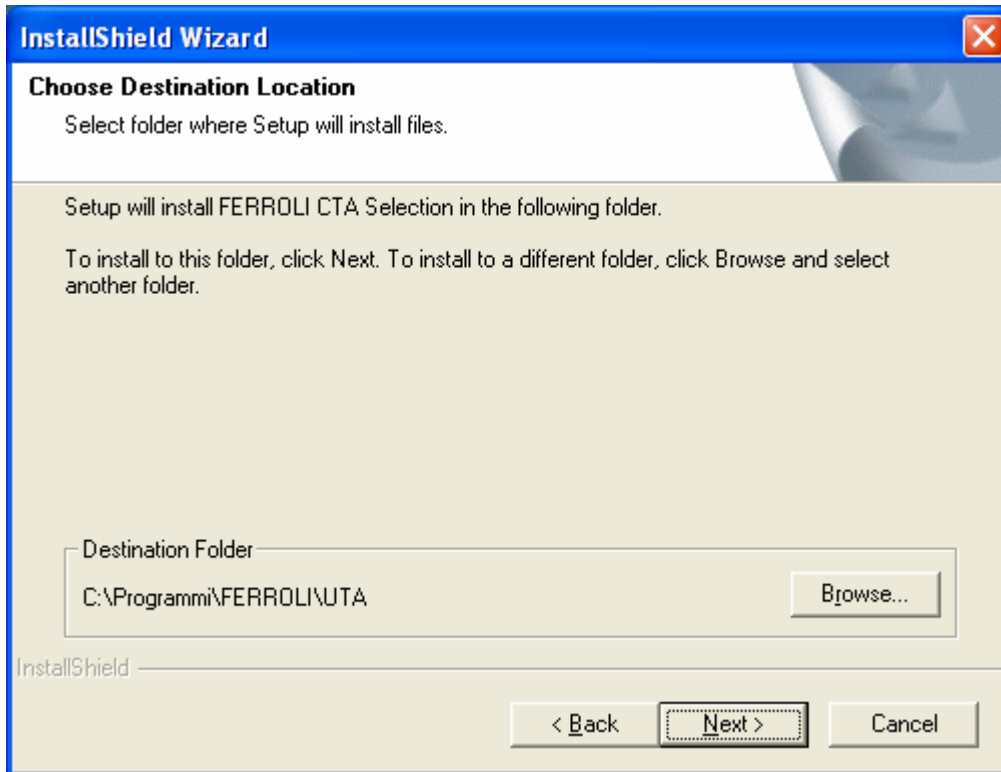

- Click **Next** to continue with the installation.

Microsoft™ Data access Environment Installation

The Microsoft™ Data Access installation starts after Air FTP is installed

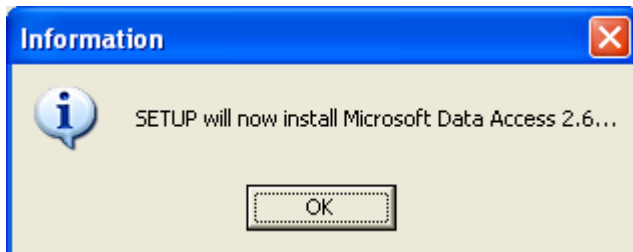


- Click **OK** continue with the installation.

License Agreement


The next dialog contains the license agreement. If you do not accept the agreement the Air FTP software will not be installed.

- Read through the license agreement. If you agree, ensure that you have scrolled to the bottom of the agreement, select the **I accept the terms of the agreement** box, and then click **OK**.
- If you do not agree, click **Annulla** to exit the setup program.

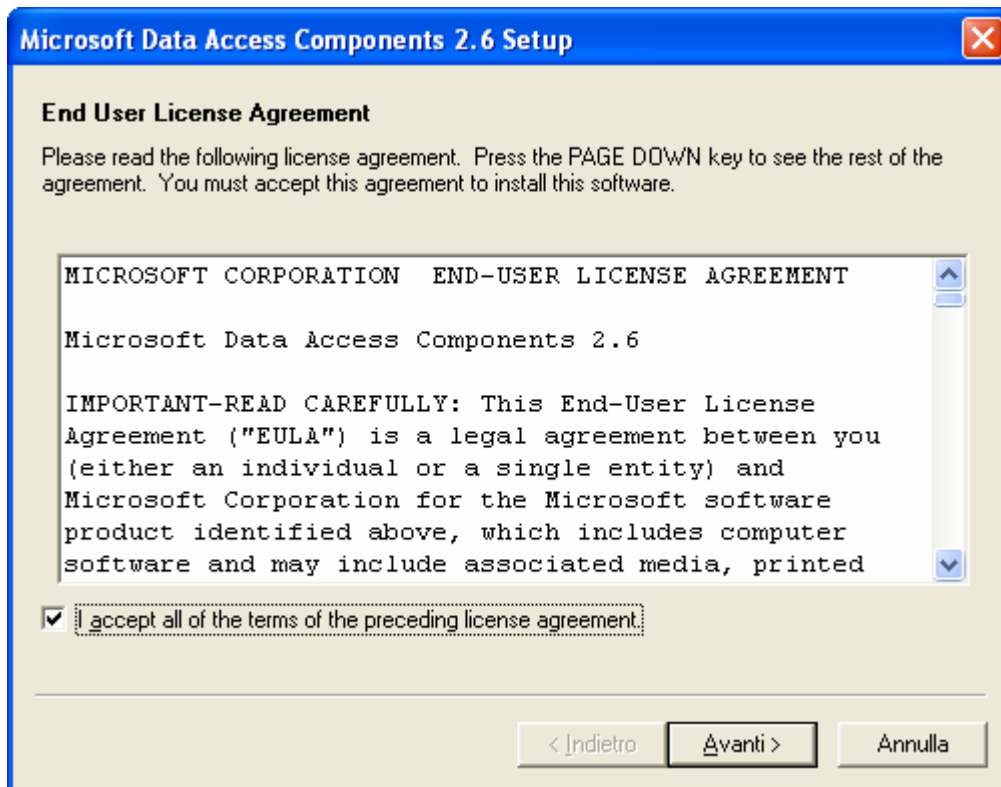


- Click **Avanti** to continue with the installation.
- Follow the instructions to install the Microsoft Data Access Components.

Microsoft™ Data access Environment Installation

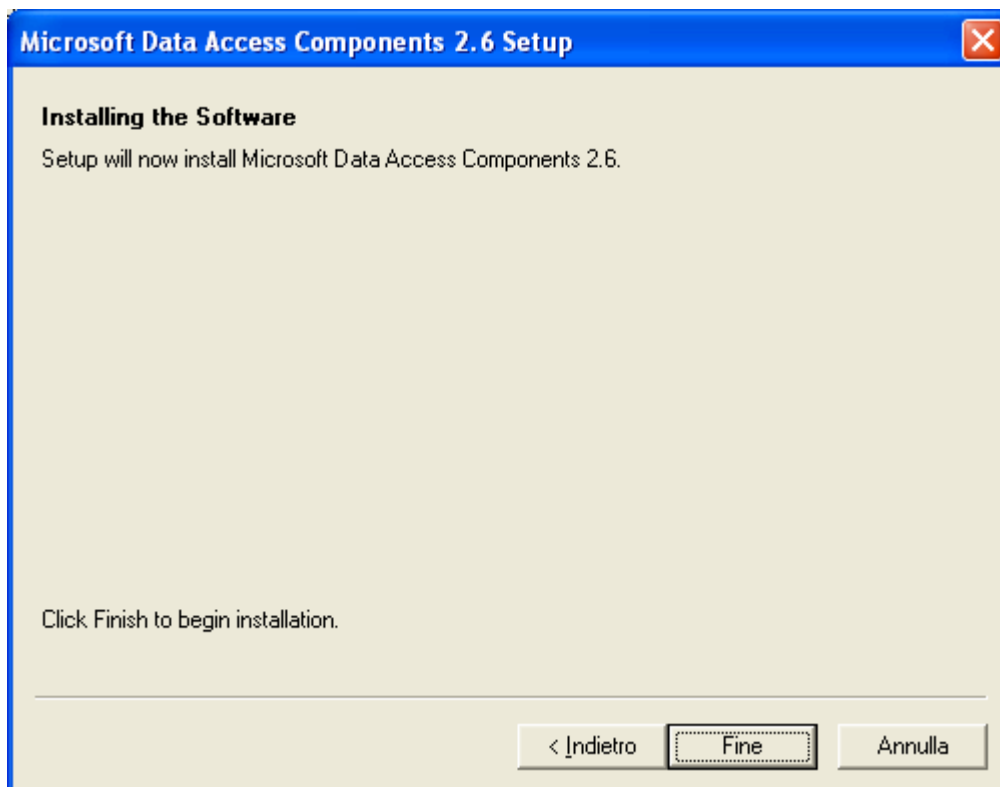

- Click **Fine** to start the installation.

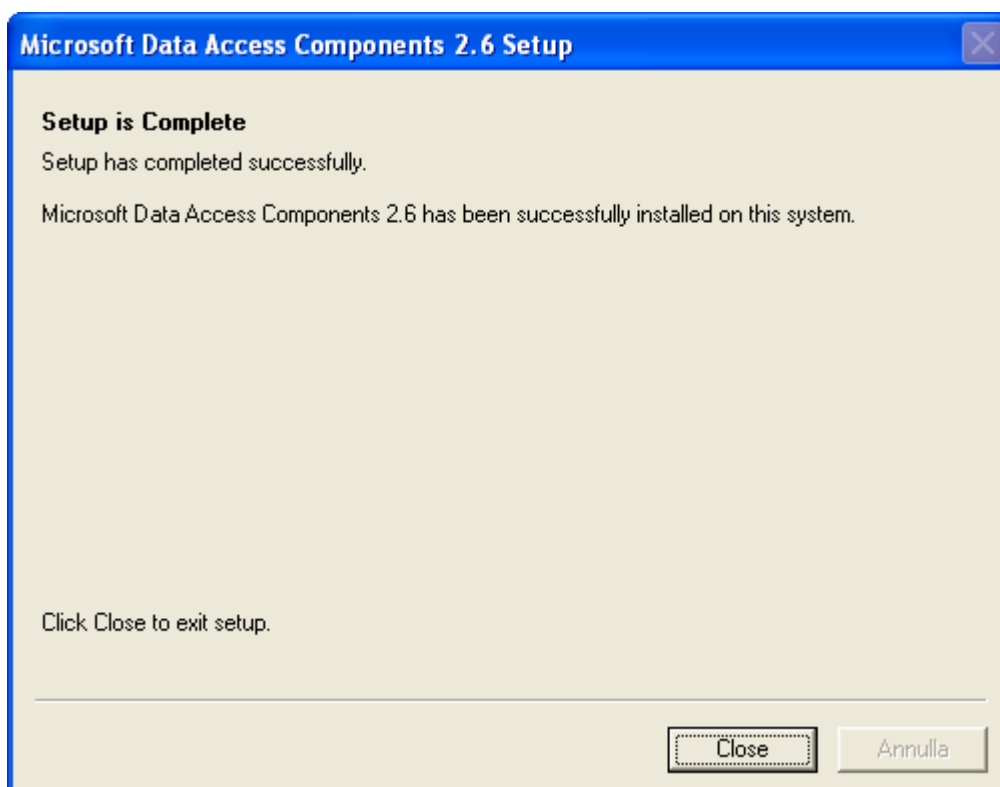


- Click **Close** to finish the installation.

Air FTP installation guide

PDF printer installation


Air FTP installs a PDF printer

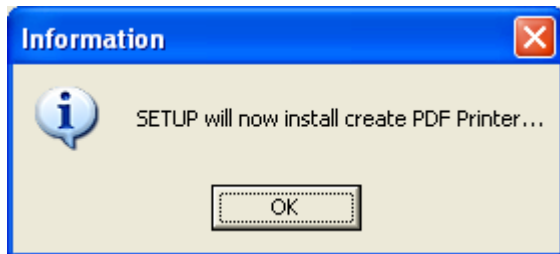

- Click **OK** continue with the installation.

RTF printer installation


Air FTP installs a RTF printer

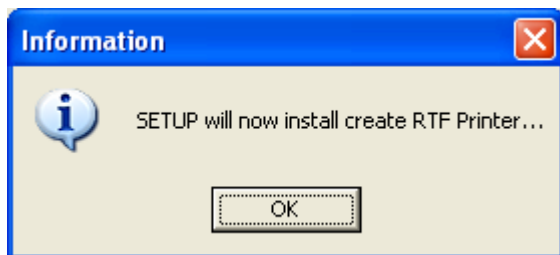

- Click **OK** continue with the installation.

Air FTP installation guide

When the installation is complete, a final dialog is displayed.

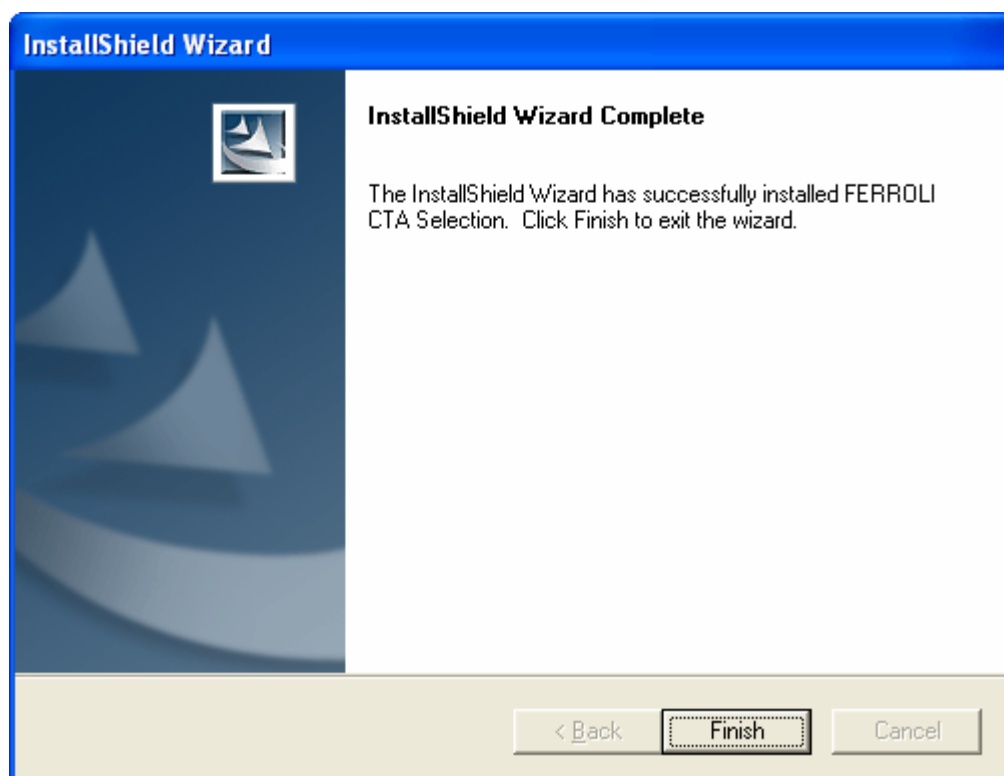

- Click **Finish** to finish the installation.

Activating Air FTP

The first time that you run the software the activation dialog is displayed

Abilitazione all'uso del programma

Ferroli

Società

Nominativo

Versione Rel. 1.0 13-06-2007

Numero di serie da comunicare a Ferroli Spa per l'abilitazione

Inserire codice di sblocco e premere unlock - - -

Giorni rimanenti versione DEMO

- Send the “Numero di serie da comunicare a Ferroli Spa per l’abilitazione” to Ferroli.
- Ferroli will send you the activation code.
- Enter the activation code received by mail.
- Click **OK** to confirm.



Send the Serial number by mail using **copy** and **past**

By keyboard

Copy = Ctrl + C

Past = Ctrl + V

With the code send company and user name too.



If you install Air FTP in different computer, you have to send us all the serial number and you will receive different activation code.

Air FTP Configuration


To set the language of work and your personal data **Run** Air FTP



- Click **Opzioni - Configurazione**

Air FTP installation guide

Program configuration windows

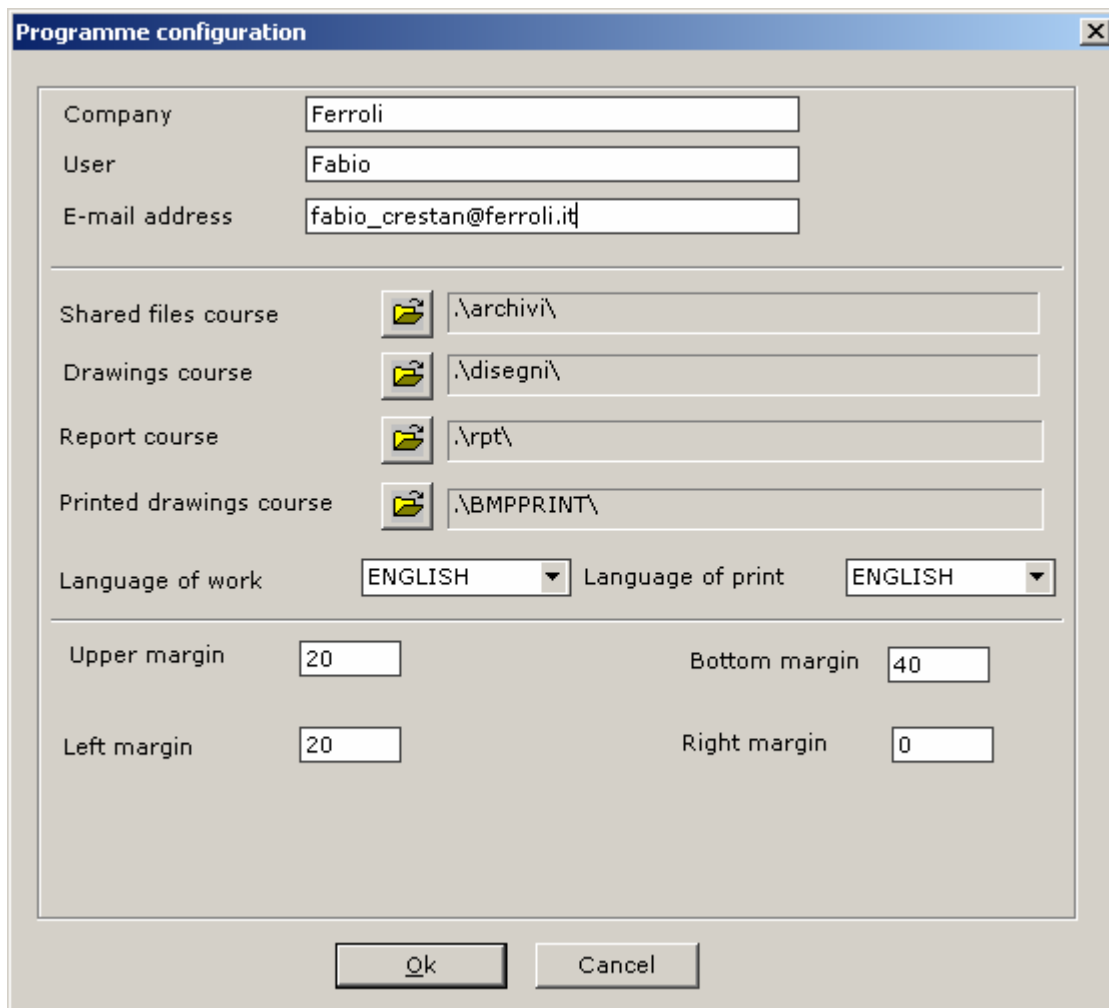

Programme configuration

Company: Ferroli

User: Fabio

E-mail address: fabio_crestan@ferroli.it

Shared files course: .\archivi\

Drawings course: .\disegni\

Report course: .\rpt\

Printed drawings course: .\BMPPRINT\

Language of work: ENGLISH

Language of print: ENGLISH

Upper margin: 20

Bottom margin: 40

Left margin: 20

Right margin: 0

Ok Cancel

- Enter your personal data.
- Set the language of work and printing.
- Enter the margin like this form 20, 40, 20, 0.
- Click **OK** to confirm.



The software is **multi-user**; you will see only the offer made with your user name.




Don't change the location of the files program.

Updating Existing installation

Welcome

The first window to appear after you start the setup application is the welcome dialog.

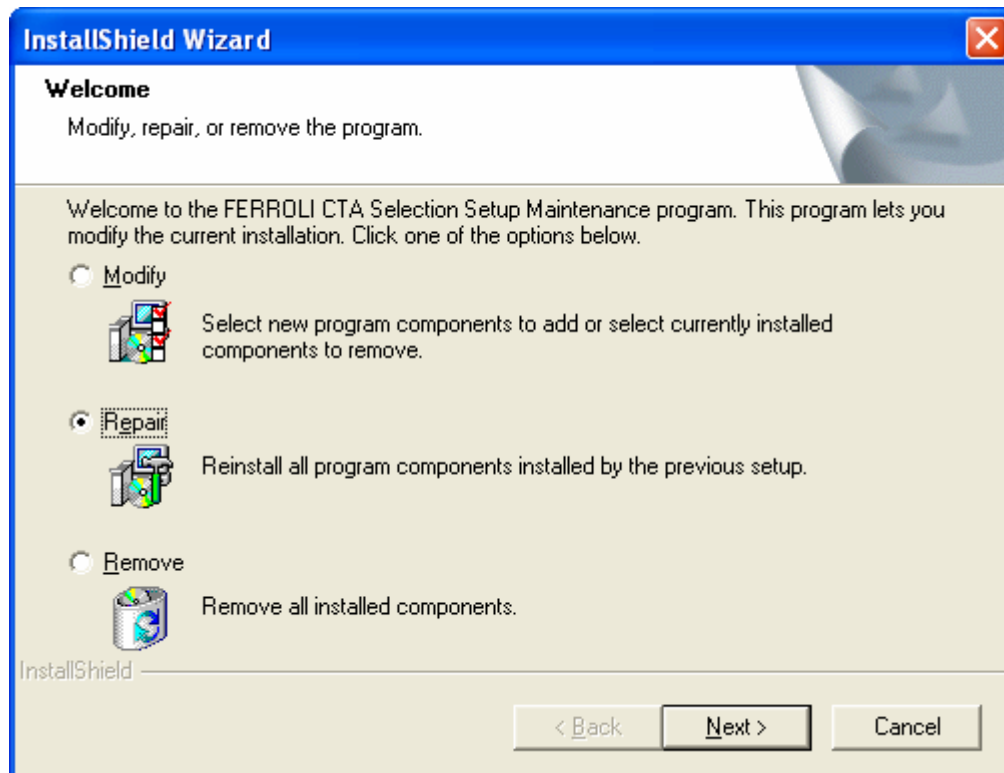


- **Select Repair**
- **Click Next.**

License Agreement

The next dialog contains the license agreement. If you do not accept the agreement the Air FTP software will not be installed.

- Read through the license agreement. If you agree, ensure that you have scrolled to the bottom of the agreement, select the **I accept the terms of the agreement** box, and then click **OK**.
- If you do not agree, click **Annulla** to exit the setup program.

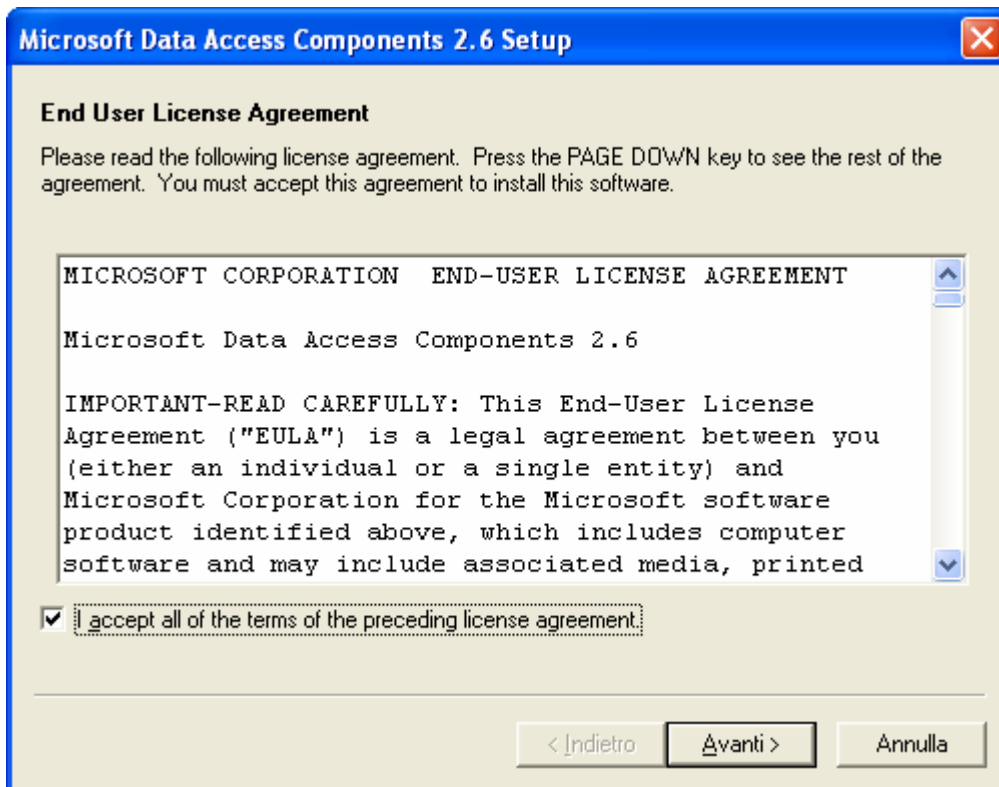


- Click **Avanti** to continue with the installation.
- Follow the instructions to install the Microsoft Data Access.


Air FTP installation guide

Microsoft™ Data access Environment Installation

The Microsoft™ Data Access installation starts after Air FTP is installed

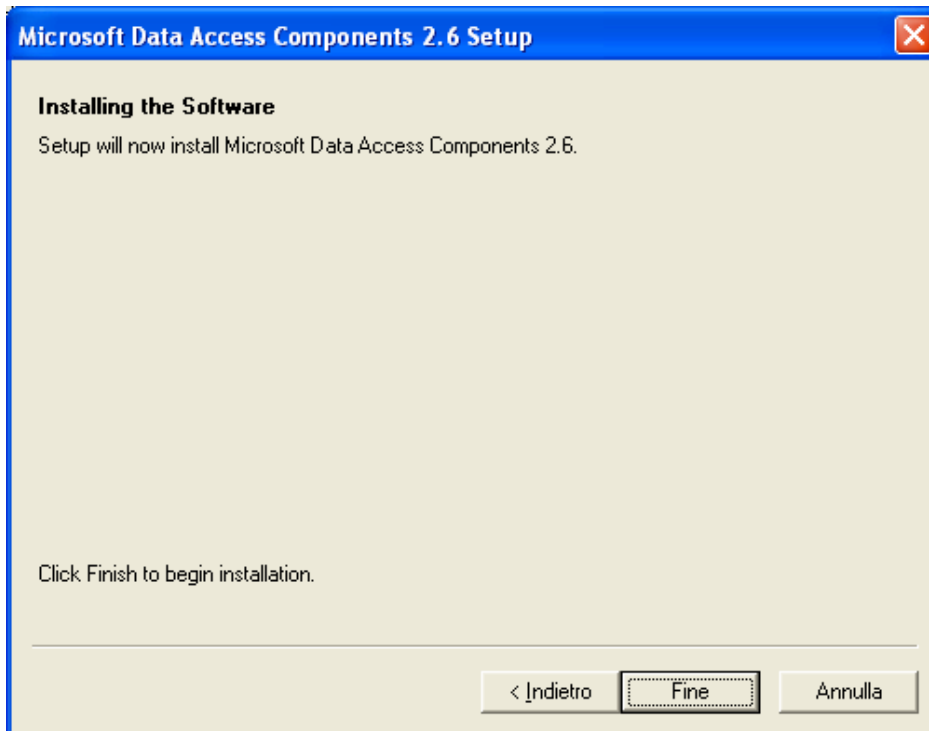

- Click **Fine** to start the installation.

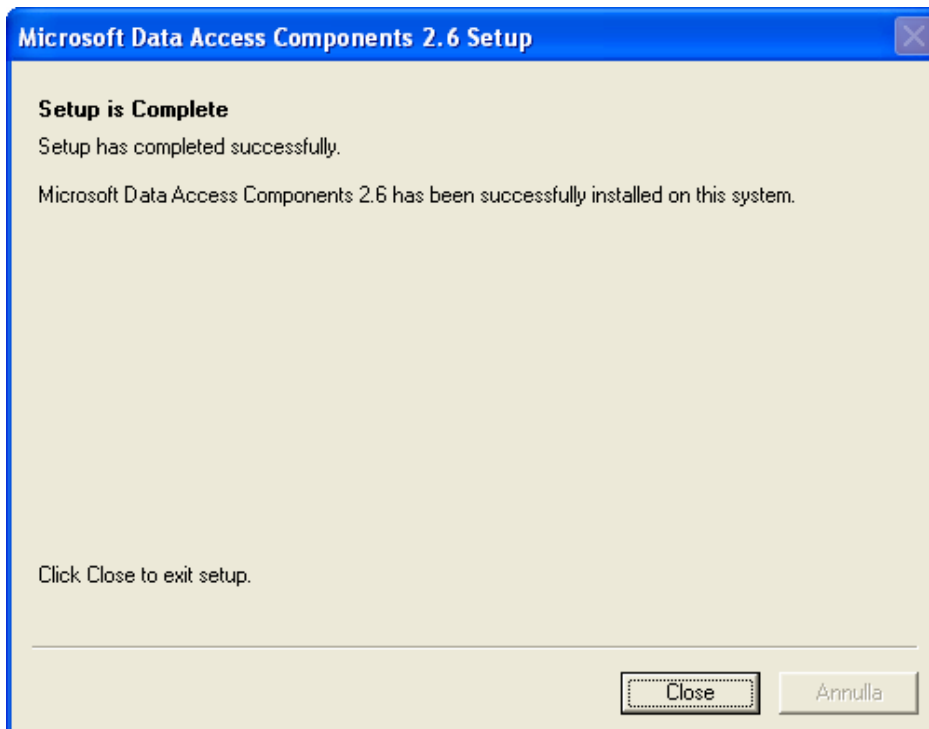


- Click **Close** to return to the welcome window

Air FTP installation guide


Welcome

After the installation of Microsoft TM Data Access environment the welcome windows appear again

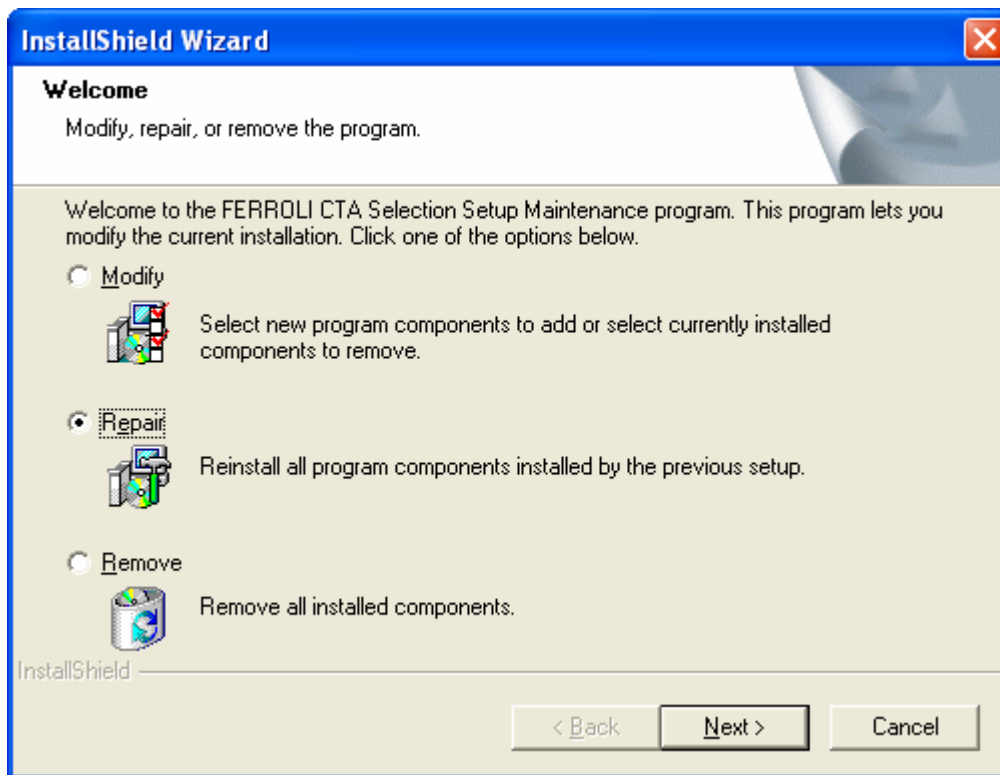


- **Select Repair**
- **Click Next.**

PDF printer installation

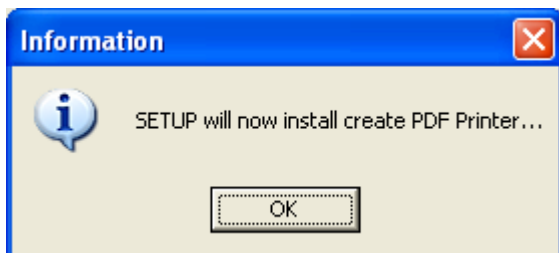


- Click **OK** continue with the installation.

RTF printer installation

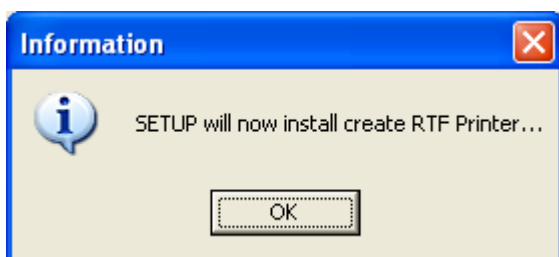

- Click **OK** continue with the installation.

When the installation is complete, a final dialog is displayed.

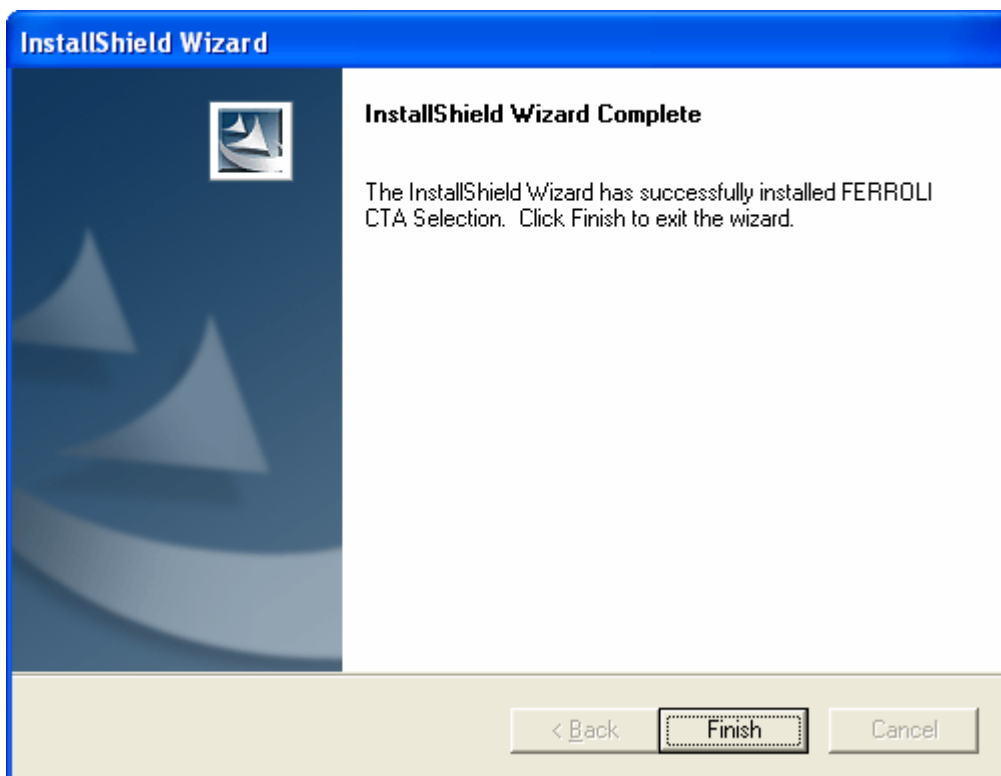



- Click **Finish** to finish the installation.

Archive updating

After updating the software you must update the archive.

- Run the software

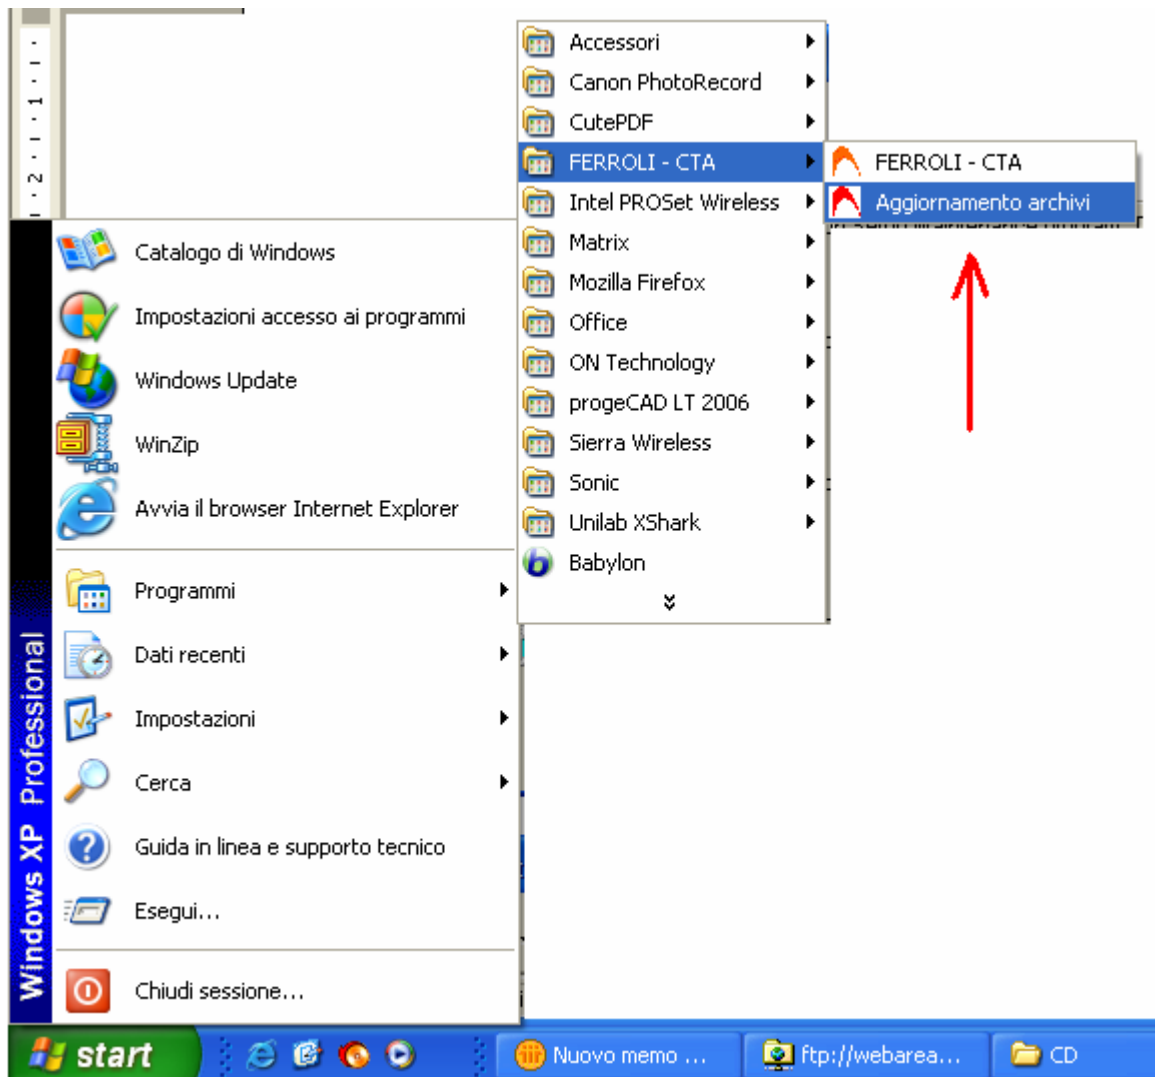

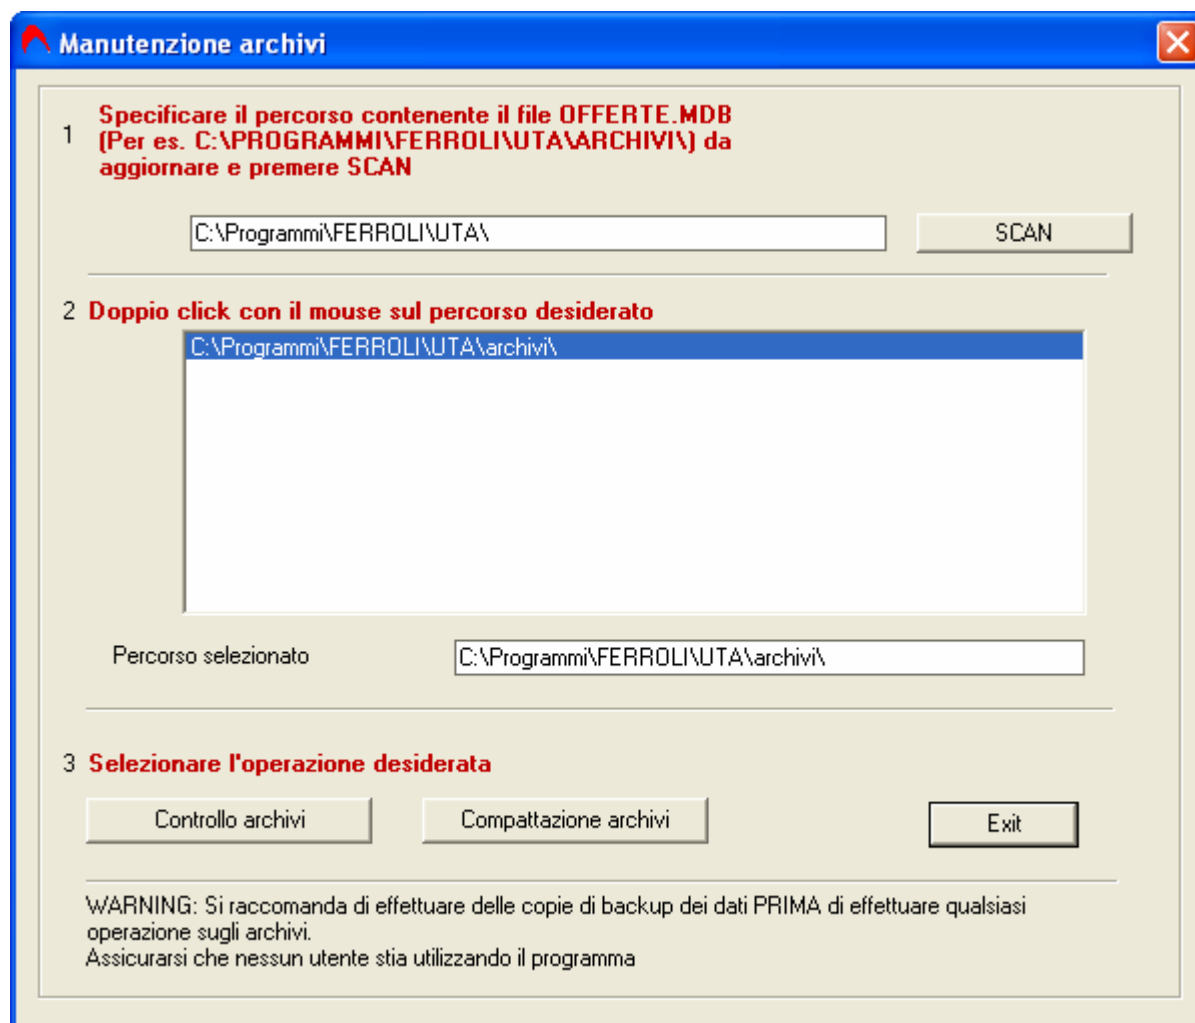

- Select the path of your offer c:\programsfile\.... Ferroli uta.
- Double click on the software path
- Click **Controllo Archivi**.
- Click **Exit** to close the program.



Create a copy of the archive before do any operation on the archive files



Be sure that the software is close.
